


# Replacing the print head


## Step 1

The print head access panel is located on the bottom of the printer.

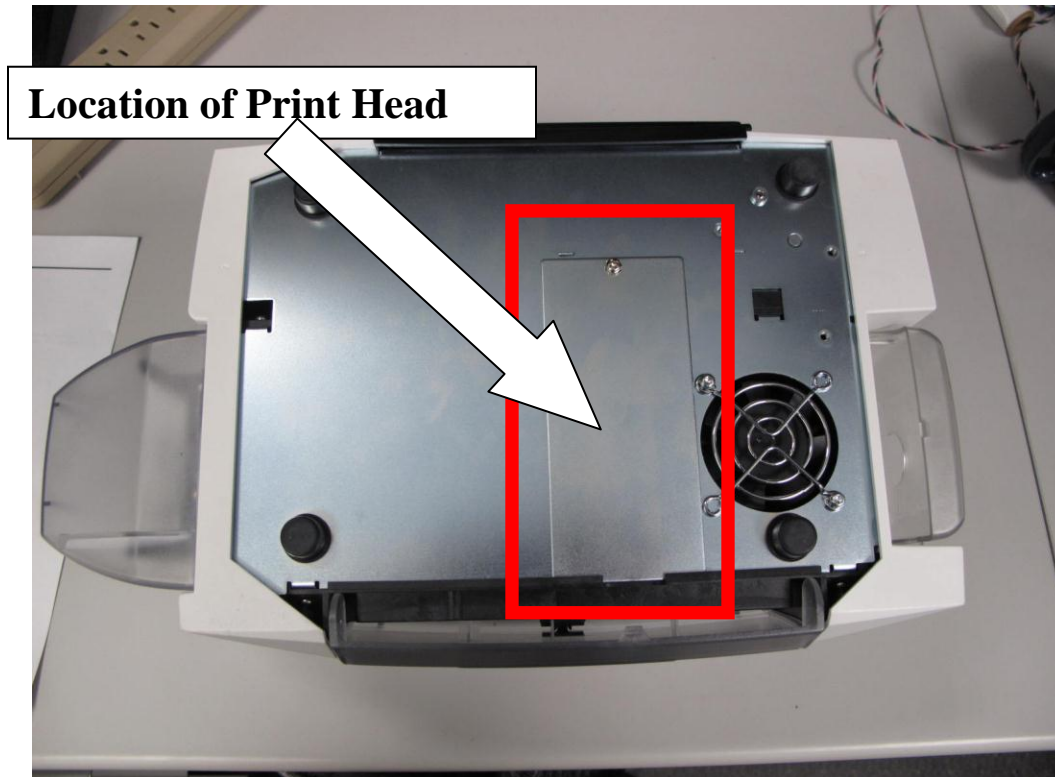

## Step 2

Remove the screw holding the metal panel in place.

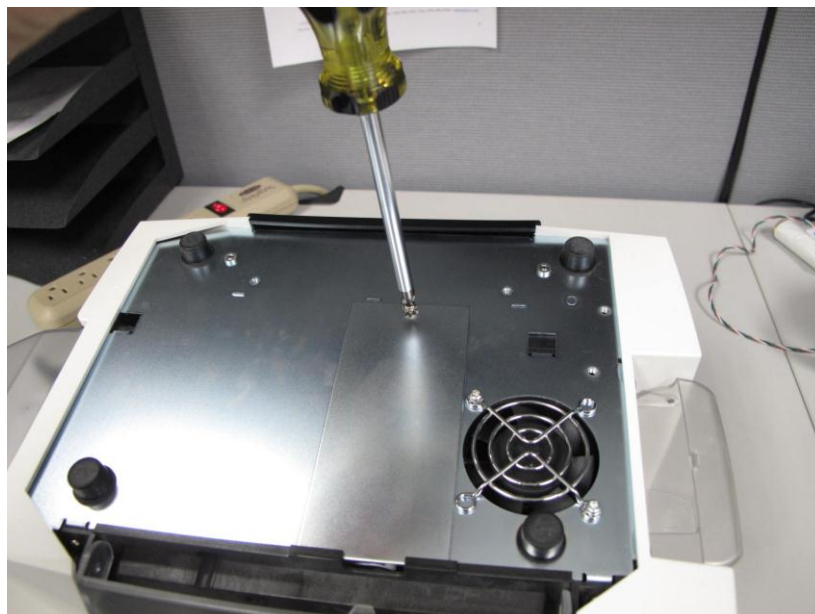


### Step 3

Pull the panel up and away from the printer to remove it




### Step 4


To remove the print head from the printer, push in the 2 plastic clips as shown below.

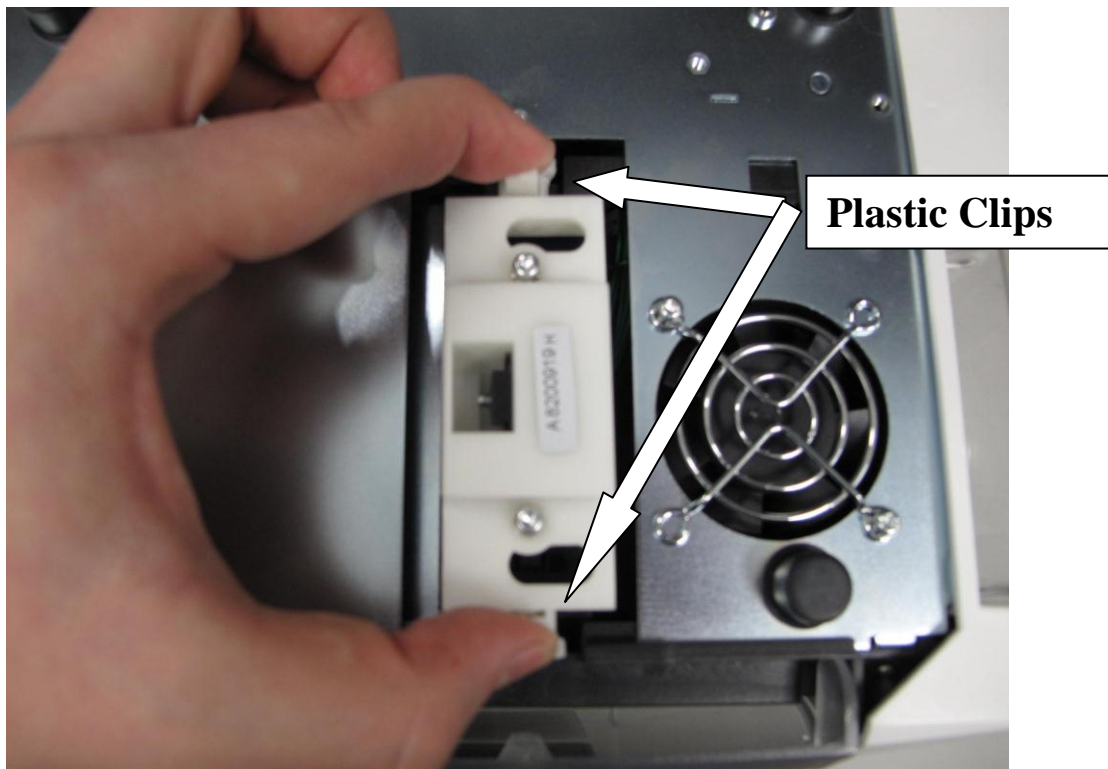

With the 2 plastic clips pushed in, slowly pull the print head up from the printer.

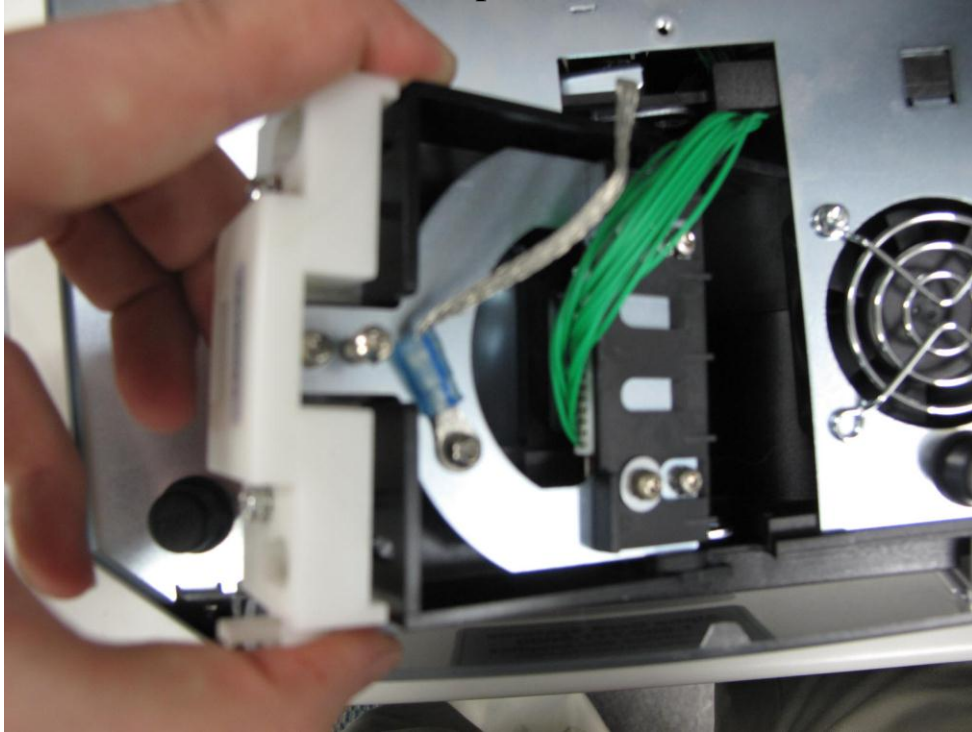

To free the print head, remove the screw shown below using a **Torx 10** screwdriver and unplug the green cable from the print head.

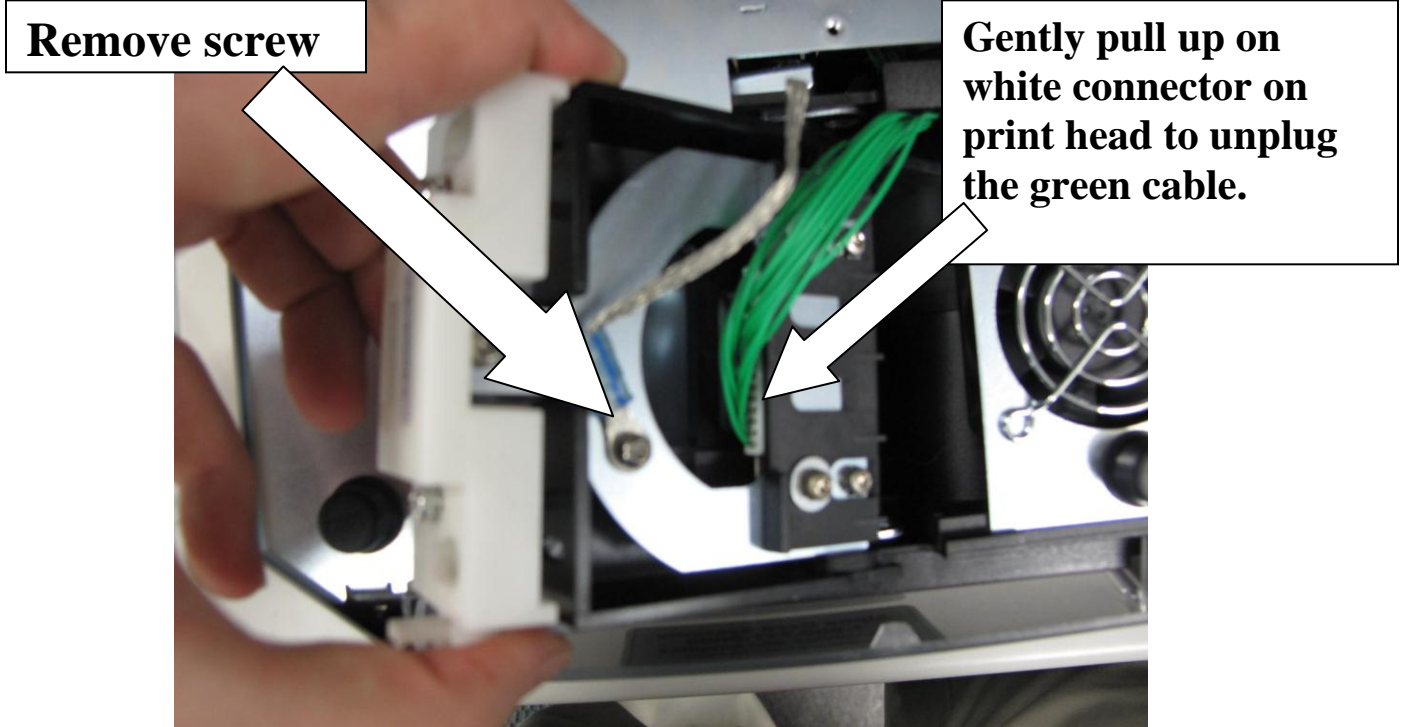

**The print head is now free from the printer.**

**Follow the steps in reverse to install the new print head**